



SPIDER SEQUENCER - DRILL TEMPLATE

the face of a 1590BB lying flat, 119 x 94 mm . tape this to it, punch, drill . DC jack on a wall, your pick
NOBODY HAS DRILLED THIS ONE YET - offer the sheet up to your box and your parts before you make a hole

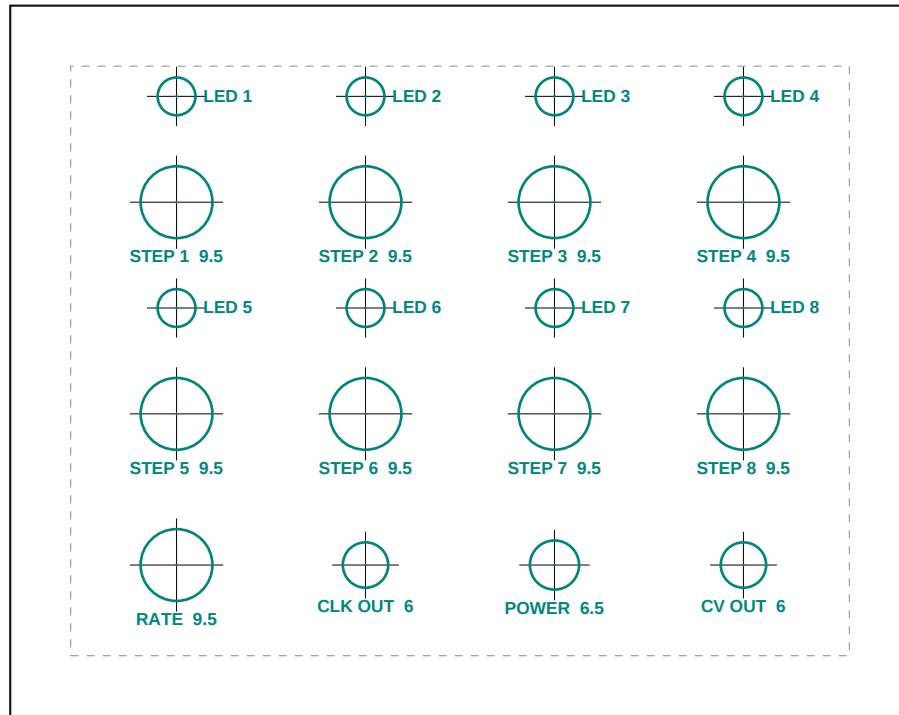

SCALE CHECK - this bar must measure EXACTLY 4 inches (101.6 mm).
Print at 100% / "Actual size", never "Fit to page."

9.5 mm pots, 5 mm LEDs, 6 mm 3.5 mm jacks, 6.5 mm toggle - spaced for knobs up to 18 mm; measure your own parts first.

The dashed line is the 8 mm keep-out for the lid lip and the corner bosses.

Pilot at 3 mm, open up, deburr, then blow every chip of swarf out of the box before any soldering.

messopedals.com/diy/onion-madder/stripboard/spider-sequencer/ . the face should measure 119 x 94 mm